


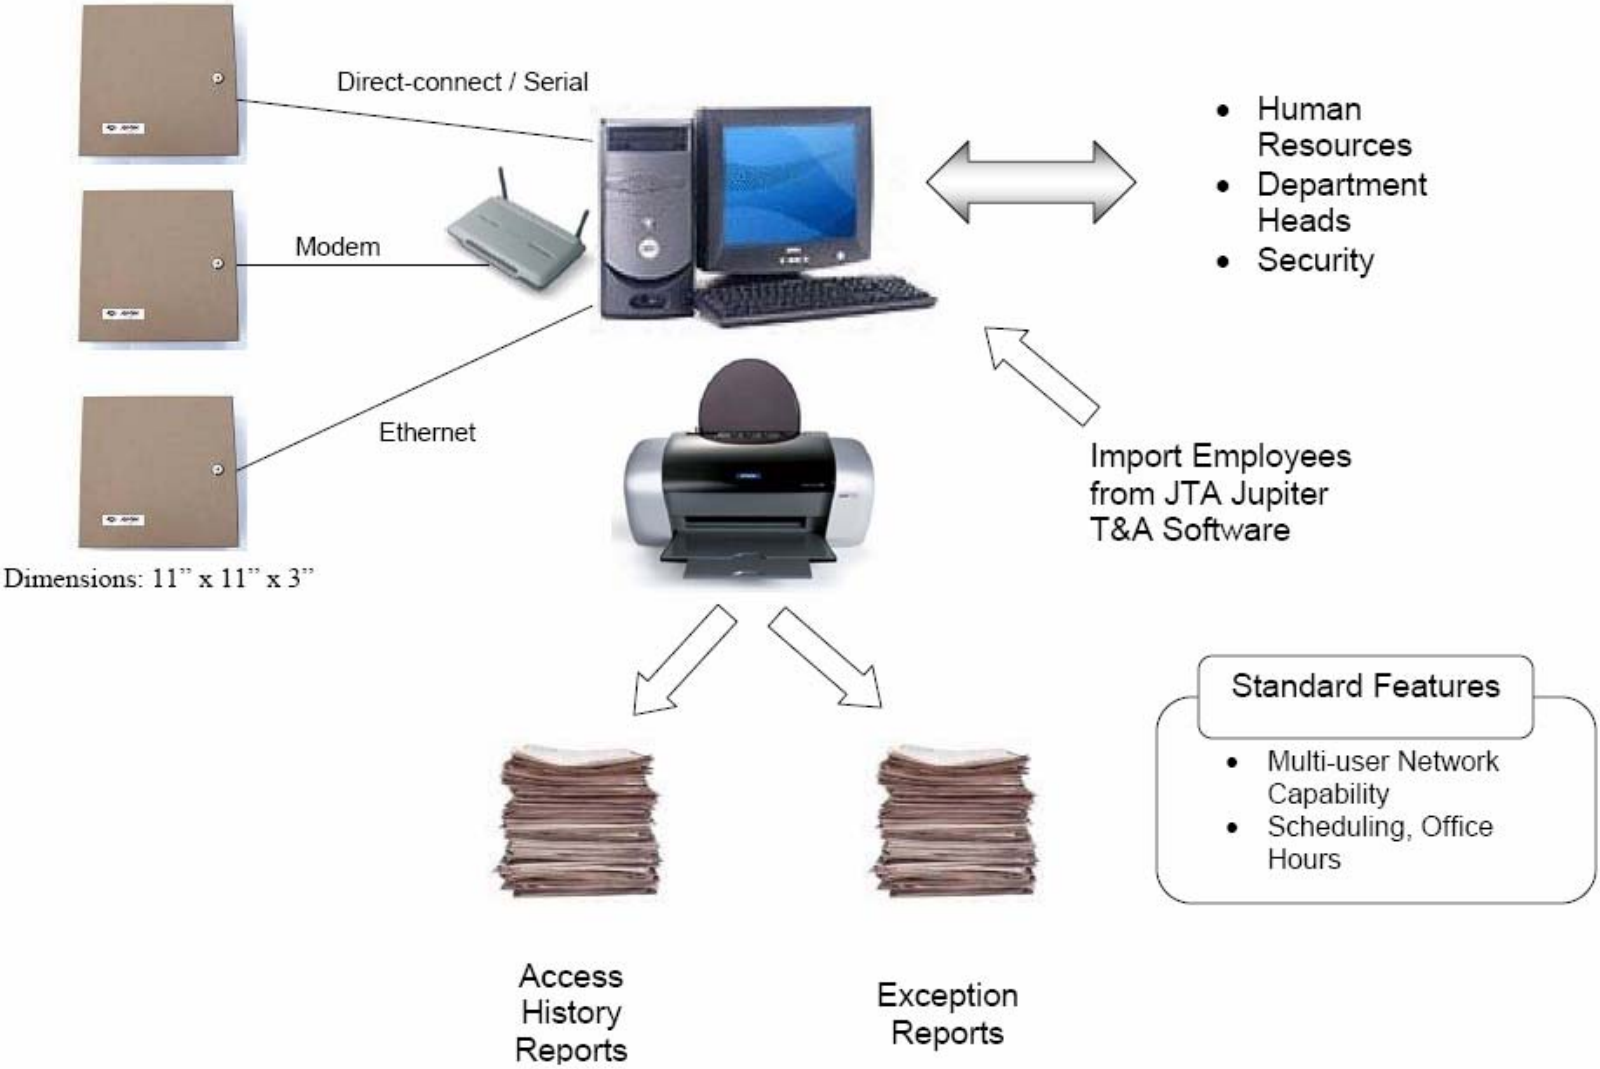

Jantek Electronics

Access Control System

JST 400 Access Control Panel



Time Zone / Space Zone

- Program what time schedule, which employees can access which doors

The screenshot shows the 'Edit Employee' window with the following details:

- Employee #: 000184
- Card #: 184
- Last Name: REYES
- First Name: VICTORIA

The 'Space/Time Zone' tab is active, showing a tree view of locations and a configuration panel:

- Main location**
 - [1] Parking Gate
 - [2] Lobby
 - [3] Main Entrance
 - [4] Server Room
- Remote Warehouse**
 - [1] Front Office
 - [2] Driver Entry Back Door
 - [3] Back Warehouse
 - [4] Front Warehouse


Configuration panel details:

- Site: Remote Warehouse
- Reader: Back Warehouse
- Assign
- Timezone Profile: 2
- Schedule:
 - M T W T F - - 08:00 - 17:30
 - - - - - S - 09:00 - 13:00

Buttons at the bottom include: All, None, Copy space/time zone, New, Delete, Save, Exit, and navigation arrows.

Communication Options

- Ethernet
- Modem
- Serial

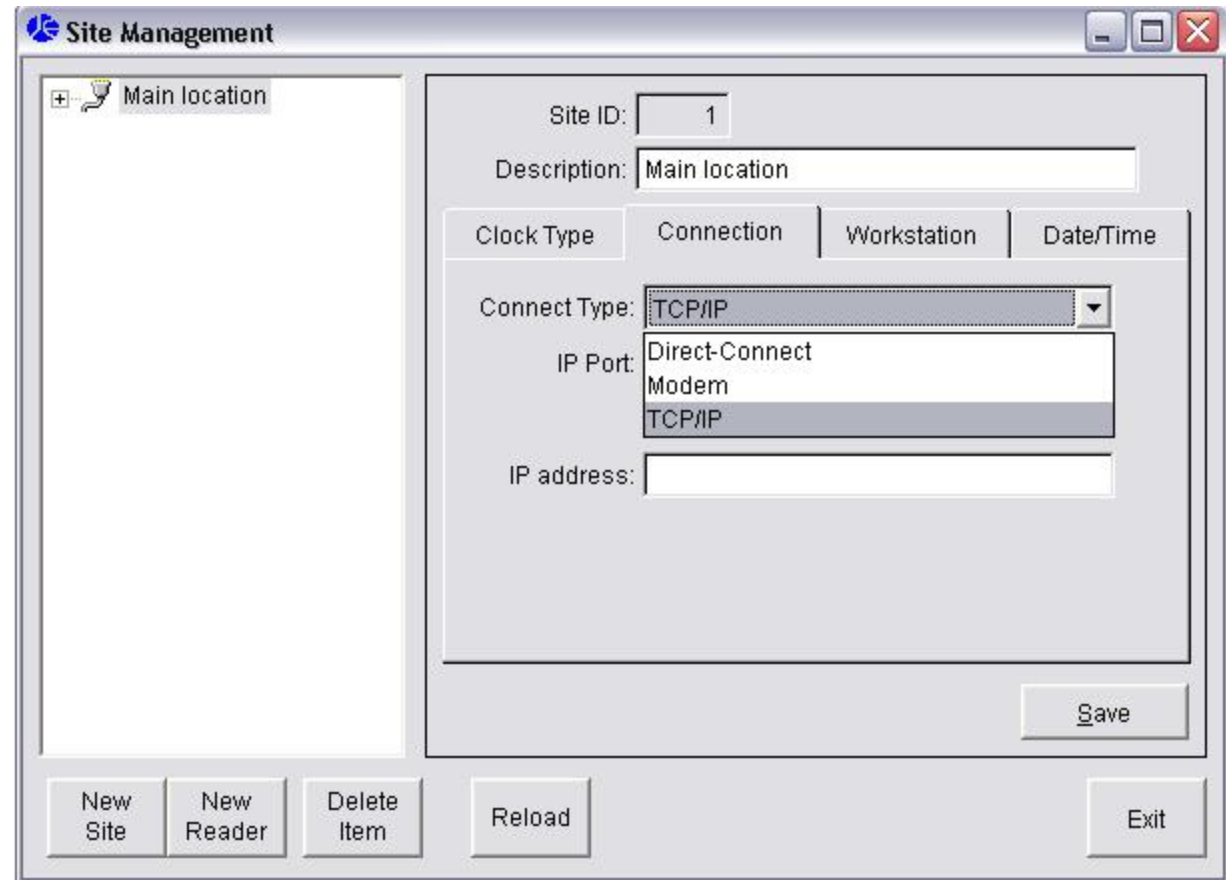A screenshot of the 'Site Management' software interface. The window title is 'Site Management'. On the left, there is a tree view with a folder icon and the text 'Main location'. The main area on the right contains several input fields and a tabbed interface. The 'Site ID' field contains the number '1'. The 'Description' field contains the text 'Main location'. Below these are four tabs: 'Clock Type', 'Connection', 'Workstation', and 'Date/Time'. The 'Connection' tab is selected. Under the 'Connection' tab, there is a 'Connect Type' dropdown menu with 'TCP/IP' selected. Below the dropdown is an 'IP Port' list box with three options: 'Direct-Connect', 'Modem', and 'TCP/IP'. Below the list box is an 'IP address' text field. At the bottom right of the main area is a 'Save' button. At the bottom of the window, there are five buttons: 'New Site', 'New Reader', 'Delete Item', 'Reload', and 'Exit'.



Communication Options

- All communication types can be easily configured from Site Management.
- Changing to a different connection type is handled seamlessly by the software.
- Mixing & matching connection types is also supported for multiple readers.


Reader Types: Proximity Reader

- Uses proximity badges for scanning.
- Allows employees to simply wave the card to scan.
- Can keep proximity badge inside wallet and still be able to scan.
- No moving parts to wear down over time.




Barcode & Magnetic Stripe

- Barcode/Magstripe readers also available.
- Can use an existing card the employee is using for another system, if the format is compatible.
- Much less cost associated with producing barcode/magstripe badges.

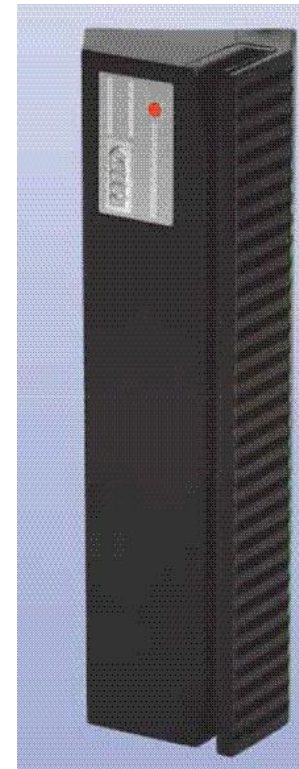

Share Employee Data

- Import employees from Jantek time and attendance software into the JASWIN access control software.

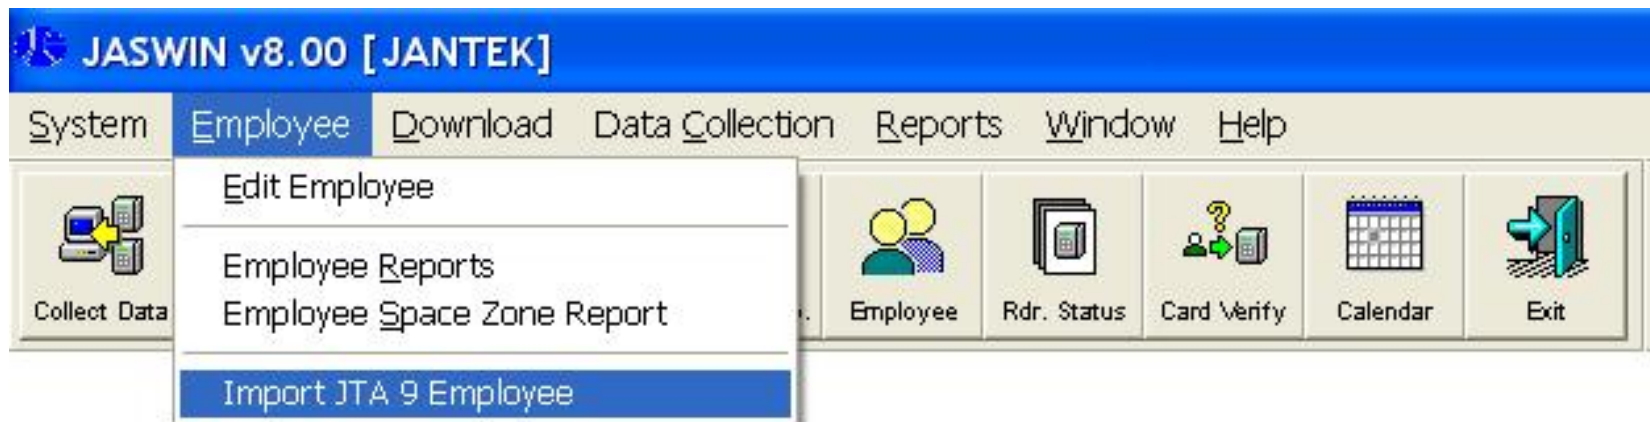

- Use same card for time clock & door access

Access History Reports

- Sort by: Employee Number, Name, Time, Card Number & Reader Number

The screenshot shows the 'Access History Report' application window. It features a title bar with a close button (X). Below the title bar, there is a 'Sort By:' dropdown menu currently set to 'Employee #'. The main area is divided into three sections: 'Employee Range', 'Misc. Range', and 'Active'. The 'Employee Range' section has three columns: 'Employee #', 'Last Name', and 'Card #'. Each column has 'From:' and 'To:' input fields with search icons. The 'Misc. Range' section has three columns: 'Date/Time', 'Company', and 'Branch'. Each column has 'From:' and 'To:' input fields with search icons. The 'Active' section has three radio buttons: 'All Employees' (selected), 'Only Active', and 'Only Inactive'. Below the 'Active' section is a 'Criteria' section with two buttons: 'Department Filter' and 'Reader # Filter'. At the bottom right, there are four buttons: 'Screen', 'Printer', 'Disk File', and 'Quit'.

Sort By: Employee #

Employee Range

Employee #	Last Name	Card #
From: 000001	From: 9	From: 1
To: 028200	To: ZUNIGA	To: 64018

Misc. Range

Date/Time	Company	Branch
From: 11/24/2006 00:00	From: 1	From: 10
To: 11/26/2006 23:59	To: 46	To: 90

Active


All Employees
 Only Active
 Only Inactive

Criteria

Department Filter
Reader # Filter

Screen Printer Disk File Quit

JST400 Wiring Diagram

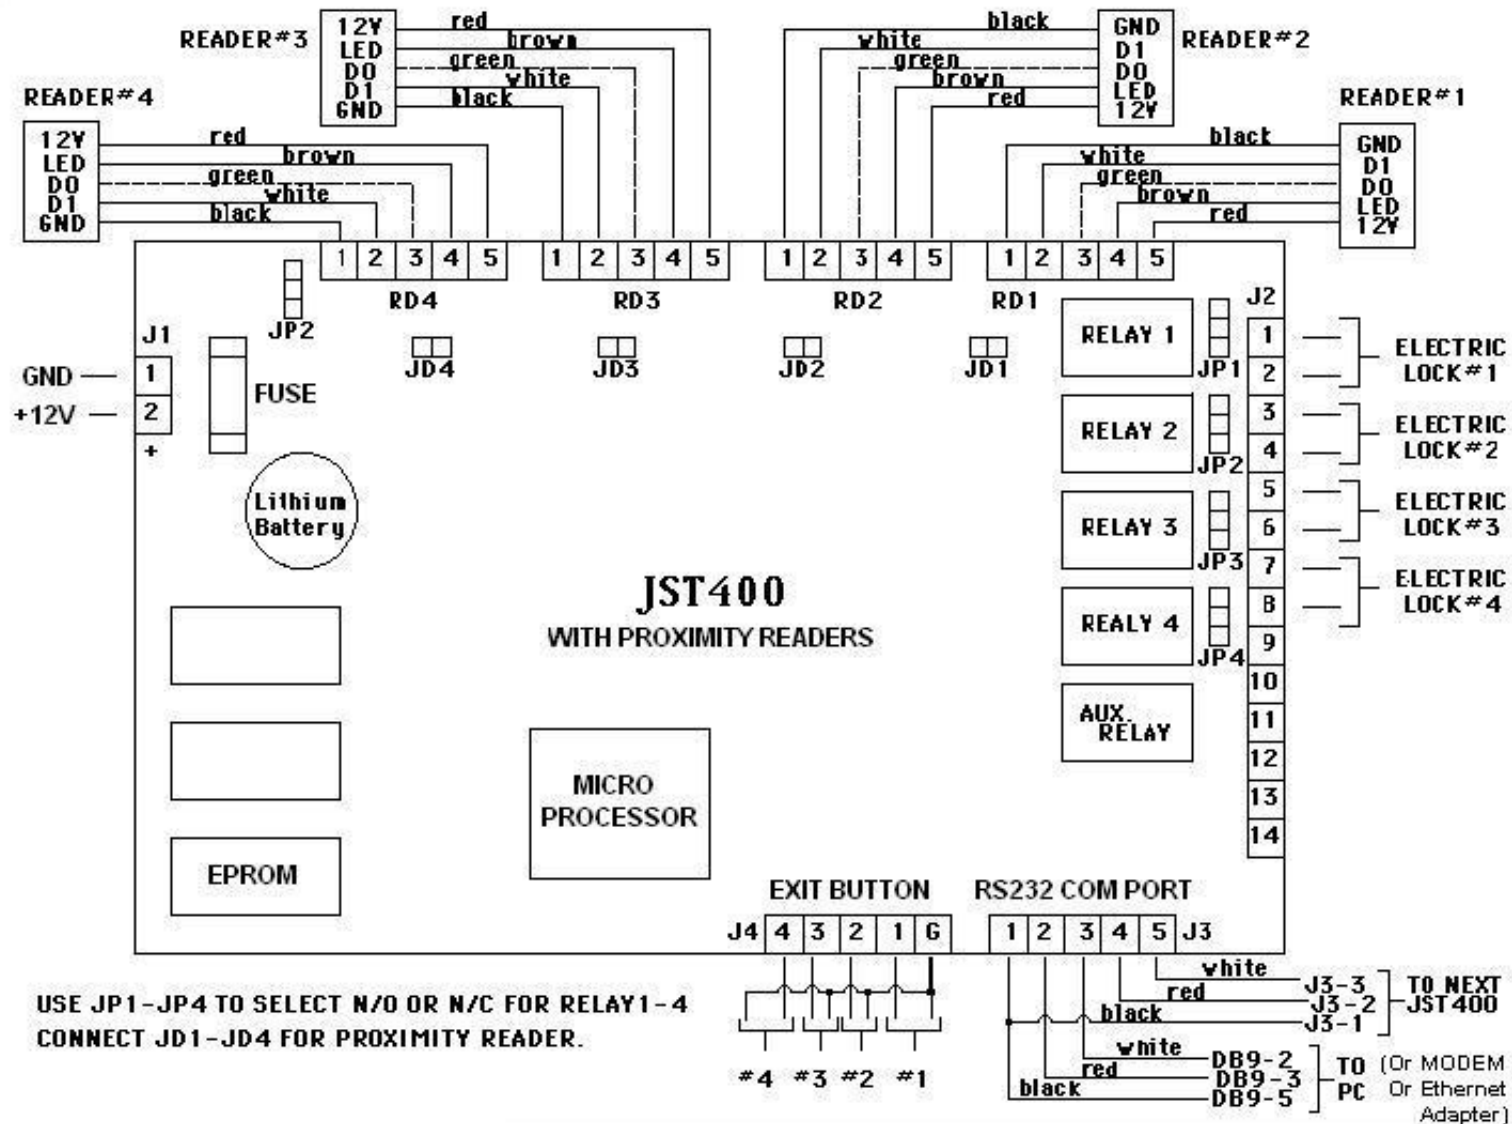

USE JP1-JP4 TO SELECT N/O OR N/C FOR RELAY1-4
CONNECT JD1-JD4 FOR PROXIMITY READER.

TO NEXT JST400
TO PC (Or MODEM Or Ethernet Adapter)